



ユーザーマニュアル 機種名 : DIP-31 オート ビデオ スイッチャー



はじめに	1
四曲	1
「阪女」	3
	4
DIP-31 オートビデオスイッチャー 各部の名称及び機能	5
DIP-31を設置する	7
DIP-31 オートビデオスイッチャーの接続	8
リモートコントロールスイッチの接続	9
RJ-45コネクターの配線	9
操作方法	10
入力選択	10
信号損失とケーブルの取り外しタイムアウト	10
オーディオ信号制御	11
VGA位相シフト	11
DIP-31の操作	12
	12
DIP-31のリセット マナログ辛吉出力辛島細熱	12
	12
	13
コイッチングタイムアウト	13
ステップイン機能を使用する	14
ウェブページを使用して DIP-31をリモートで操作する	15
DIP-31 ウェブページの閲覧	15
切り替えページ	17
デバイス設定ページ	18
コントロール設定ページ	21
映像と音声の設定ページ	22
認証ヘーン FDID 答理ページ	23
ファートウェア更新ページ	24
About USページ	27
仕様	28
デフォルト IP パラメーター	28
デフォルト RS-232 通信パラメーター	29
デフォルト ログイン認証情報	29
HDMI 対応解像度	30
VGA 对心解像度	30
デフォルト EDID	31
HDMI	31
	32
	34
ノロトコル 3000について カレイマー プロトコル 3000 シンタックス	35
プロトコル 3000 コマンド	37

はじめに

クレイマーエレクトロニクスにようこそ!1981年以来クレイマーエレクトロニクスは、映像・音声 プレゼンテーション及び放送のプロフェッショナルが日常的に直面する様々な問題に対して、 ユニークで創造的、且つ手頃な価格のソリューションを提供してきました。 近年、私達は殆どのラインを再設計、及びアップグレードし最高の物をさらに良くしました!

ご使用前に

下記を行う事をお勧めします:

- ・機器を慎重に開梱し、箱と梱包資材は以降の運搬用に保管してください。
- ・ユーザーマニュアルをご熟読ください。
- www.kramerav.com/downloads/DIP-31 に接続して最新のユーザーマニュアル、アプリケーション プログラムを確認し、ファームウェアの更新が利用可能か確認して下さい。

最適な動作を得るために

- ・信号干渉を避けるため、良質なケーブル(クレイマー社の高性能・高分解能ケーブルを 推奨します)のみを使用し、(低品質ケーブルに関連することが多い)信号品質の低下、 ノイズレベルの上昇に気を付けて下さい。
- ・ケーブルをきつく束ねたり、たるみを巻きつけないでください。
- ・信号品質に悪影響を与える可能性のある電気器具からの干渉を避けて下さい。
- ・湿度の高い場所、直射日光の当たる場所、埃の多い場所には設置しないでください。

この装置は、建物内でのみ使用してください。建物内に設置されている他の機器にのみ 接続してください。

安全上の注意

▲ 注意: 本体内には、お客様自身が修理できる部品はありません。

🂫 警告: 製品に付属の電源コードのみを使用してください。

警告: 本体を開けないでください。内部には高電圧部がありむやみに触れると 感電するおそれがあります。

サービスは、資格を持った担当者のみとなっています。

警告: 設置する際には電源を切り、本体は壁から離して設置してください。

Kramer Electronics Ltd.

概要

この度は、クレイマー DP-31オートビデオスイッチャーをご購入いただき有難う御座います。 DIP-31は、4Kビデオ信号の高性能マルチフォーマットスイッチャーです。 インテリジェントなマエストロオートメーションは、優先度又はラスト接続によるスイッチング を使用して、アクティブなビデオ信号の検出に基づいて選択されたスイッチング機構に従って 自動的にスイッチング操作することができます。

DIP-31オートビデオスイッチャーの機能:

- ・シンプルで強力なマエストロルームオートメーション: 直感的なユーザーインターフェースにより、
 会議室の要素を完全に自動化します。ライト、シェード、デバイス等を入力/出力接続、ルーティング、
 ボタンの押下など、様々なトリガーによってアクティブ化されるよう構成します。
 ユーザーの介入を最小限に抑えることで、マエストロルームの自動化により会議の準備時間が節約され、
 プレゼンテーション前の人的なエラーが最小限に抑えられます。
- ・BYOD プラグ&プレイオートスイッチャー: 優先度やラスト接続された入力等、ユーザーが構成した 設定に従って、接続されたディスプレイで切り替えられたユーザーデバイスのソース信号を自動的に 再生します。ユーザーが手動で切り替えると、ボタンを押すことで自動切り替えが無効になります。
- ・シンプルなスイッチング操作: 柔軟なユーザー入力選択とスイッチング制御のためのローカルボタン、 またはリモート制御された接点制御ボタン。
- ・HDMI[™]信号スイッチング: HDCP準拠、ディープカラー、x.v.Color[™]、リップシンク、 HDMI非圧縮音声チャンネル、ドルビー TrueHD、DTS-HD、2K、4K、およびHDMI 2.0で規定された 3Dをサポートします。
- ・I-EDIDPro[™] クレイマーインテリジェント EDID プロセッシング[™]: インテリジェントEDID処理、 ロック、パススルーアルゴリズムにより、HDMIソース及びディスプレイシステムのプラグアンドプレイ 操作が保証されます。
- ・マルチチャンネル音声スイッチング: スタジオグレードのサラウンド音声に対応する 最大32チャンネルの非圧縮デジタルステレオ信号。
- ・音声のエンベディング: ユーザーの選択に応じて、自動検出されたアナログステレオ音声入力が
 デジタル信号に変換され、出力信号にエンベッドされ、ソースのHDMI音声入力信号に置き換わります。
 これにより、例えばプレゼンターは再生中のソース音声に一時的に音声解説をオーバーライドできます。
- ・音声のディエンベッド: 出力に渡されるデジタル音声信号は、エンベッドされずアナログ信号に変換され、 ステレオアナログ音声出力に出力されます。これにより、AVアクセプター機器に接続されたスピーカー (スピーカー付きテレビ等)で音声を再生するのと並行して、ローカルに接続されたスピーカーでも音声を 再生できます。
- ・費用対効果の高いメンテナンス: HDMIおよびVGAポートのステータスLEDインジケーターにより ローカルでのメンテナンスとトラブルシューティングが容易になります。内蔵ウェブページによる リモートIPデバイス管理とRS-232接続による管理。RS-232またはイーサネット接続ツールによる ローカルおよびリモートのファームウェア更新により、現場での持続的な対応を保証します。
- ・簡単なインストール: コンパクトなメガツールのファンレスの筐体でテーブル取り付けも可能。

代表的なアプリケーション

DIP-31は、次の一般的なアプリケーションに最適です。

- ・講堂、トレーニングルーム、教室等のテーブルマウント型アプリケーション
- ・ハドルルームおよびAV配信システム内のユーザーアクセス可能なスイッチャー
- ・様々な企業アプリケーションでのマルチメディアおよびプレゼンテーションソース選択

マエストロについて

DIP-31 クレイマーの構成が簡単なシングルトリガールームオートメーションであるソフトウェア マエストロを紹介します。マエストロは、最小限のエンドユーザーでカスタマイズされた会議室環境 を作成することができます。

マエストロは、ラップトップを接続したり、ディスプレイをオフにしたりする等事前定義された イベントまたはトリガーに基づいて一連のアクションを作成します。これらのイベントは、 (Wake-on-LANを介して)コンピューターの電源を入れたり、ライト、プロジェクター、ディスプレイ、 ビデオソース、HVACのオンとオフを切り替えたりする等のアクションをトリガーできます。

クレイマーのデバイスドライバーの動的データベースと統合されているため、マエストロが実行できる アクションの種類にい終わりはありません。 マエストロは、様々なポートタイプの自動制御を可能にします:RS-232、イーサネット、GPIO、 リレーおよびIR

マエストロは、照明とデバイスが自動的にオフになるようにすることで、会議室を環境に優しいものに します。このソリューションは、トリガーに基づいてデバイスまたは一連のデバイスをオンまたは オフにするものです。例えば入力や時間の節約等。これにより環境に配慮した職場を作るのに役立ち、 時間の経過とともに大幅なエネルギーコストを節約します。

DIP-31 オートビデオスイッチャー

各部の名称と機能

図 1 DIP-31 フロントパネル各部名称と機能



図 1: DIP-31 フロントパネル

No	名称		機能
1		セレクトボタン	ボタンを押すと HDMI IN 1 入力を選択します。
			HDMI IN 1 を選択するとボタンは以下のようになります:
	HDMI IN 1		・外部音声が選択されている場合、赤く点灯
			・HDMI IN 1 が選択されている場合、緑色に点灯
2		HDMI 1 コネクタ	1番目のHDMI ソースに接続します。
3	HDMI IN 2	セレクトボタン	ボタンを押すと HDMI IN 2 入力を選択します。 HDMI IN 2 を選択するとボタンは以下のようになります: ・外部音声が選択されている場合、赤く点灯 ・HDMI IN 2 が選択されている場合、緑色に点灯
4		HDMI 2 コネクタ	2番目のHDMI ソースに接続します。
5	PC IN	セレクトボタン	ボタンを押すと PC映像入力を選択します。 PC映像入力を選択するとボタンは以下のようになります: ・外部音声が選択されている場合、赤く点灯 ・PC映像入力が選択されている場合、緑色に点灯
6		PC映像 HD15ピンコネクタ	PC映像ソース (例えばノートPC等)に接続します。
7	AUDIO IN 3.5mm ミニジャック		アンバランスステレオ音声ソース(例えばノートPCの音声出力) に接続します。
8	ステップインボタン		ボタンを押すと、このデバイスが接続されている 互換性のあるスイッチャーの入力を選択します。
9	ON LEDランプ		デバイスの電源がオンになると緑色に点灯します。

図 2 DIP-31リアパネル各部名称と機能



図 2: DIP-31 リアパネル

			144 01-
No	名称		機能
1	AUDIO OUT 3.5mm ミニジャック		アンバランスステレオ音声アクセプター(例えばアクティブ
			スピーカー等)に接続します。
2	イーサネ	ット RJ-45 コネクタ	LANに接続します。 (イーサネットまたはPCコントローラー)
3		CONTROL	シリアルコントローラーまたはPCに接続します。
	RS-232	3ピンターミナルブロック	
4		DATA	シリアルデータアクセプターに接続します。
		3ピンターミナルブロック	
5	PC/HDM	Iリモート トグル スイッチ	リモートモーメンタリースイッチに接続して、
	ターミナ	ルブロック	PC映像とHDMI 入力を切り替えます。
6	リモート	接点制御 4ピン	リモートモーメンタリースイッチに接続して、
	ターミナ	ルブロック	ステップインと音量を制御します。
7	7 ファクトリー リセットボタン		ボタンを短く押すと再起動し、長押しするとデバイスを
			│工場出荷時デフォルトパラメーターにリセットします。
8	セットアップ 4極 DIP スイッチ		デバイスの動作を設定するためのスイッチ
			(13 ページのDIP スイッチの設定 を参照)
9	PROG E	ニ USB コネクタ	PCに接続して、ファームウェアの更新を実行します。
10	HDMI O	JT コネクタ	HDMI 互換のディスプレイに接続します。
11	12V DC	コネクタ	付属の電源アダプタに接続します。

DIP-31を設置する

このセクションでは、DIP-31の取り付け手順について説明します。 設置する前に、環境が推奨範囲内にあることを確認して下さい:

- ・動作温度 : 0 ~ 40
- ・保存温度 : -40 ~ 70
 - ・湿度 : 10 ~ 90% 結露無きこと

▲ 注意:

└ ・ケーブルや電源を接続する前に、DIP-31を設置してください。

警告:

- ・環境(例えば最大周囲温度や空気の流れ等)が製品に適合していることを
 確認してください。
- ・不均一な機械的負荷を避けて下さい。
- ・回路の過負荷を回避するために、仕様に記載の定格を適切に考慮してください。
- ・ラックマウント機器の確実な接地を維持してください。
- ・機器の最大取付高さは2メートルです。

DIP-31をラックに取り付けるには

推奨されるラックアダプターを使用して、ユニットをラックに取り付けます。 (www.kramerav.com/product/DIP-31を参照)

DIP-31をテーブルまたは棚に取り付けるには

・ゴム製の脚を取り付け、ユニットを平らな面に置きます。

・ユニットの両側にブラケット(付属)を取り付け、平らな面に設置してください。

) 詳細については、www.kramerav.com/downloads/DIP-31にアクセスしてください。



DIP-31オートビデオスイッチャーの接続

DIP-31に接続する前に、必ず各デバイスの電源をオフにしてください。 DIP-31を接続し、それぞれに電源を接続してから、各デバイスの電源をオンにします。



図 3 に示すようにDIP-31を接続するには:

- 1.HDMI ソース(例えばブルーレイディスクプレイヤー等)をHDMI IN 1入力に接続します。
- 2.PC映像ソース(例えばノートPC等)をPCIN入力に接続します。
- 3.アンバランスステレオ音声ソース(例えばノートPCからのオーディオ出力等)を AUDIO IN 3.5mmミニジャックに接続します。
- 4.DIP-31のリアパネルにあるHDMI OUTコネクタを、HDMI互換のスイッチャー、 ディスプレイ、又はプロジェクターに接続します。
- 5.DIP-31のリアパネルのDATA RS-232 3ピンターミナルブロックにRS-232制御デバイス (例えばプロジェクター等)またはRS-232コントローラーを接続します。
- 6.DIP-31のリアパネルのAUDIO OUT 3ピンターミナルブロックにアンバランスステレオ アクセプター(例えばアクティブスピーカー等)を接続します。
- 7.STEP IN 2ピンターミナルブロックにモーメンタリー接点スイッチを接続します。 (9ページのリモートコントロールスイッチの接続を参照)
- PC/HDMI ピンターミナルブロックに入力選択用モーメンタリー接点スイッチを接続します。 (9ページのリモートコントロールスイッチの接続を参照)
- 9.音量UP/DOWN 3ピンターミナルブロックにリモート制御用接点スイッチを接続します。

10。DIP-31の電源アダプタを主電源に接続します。(図 3 には示されていません)

リモートコントロールスイッチの接続

リモート用モーメンタリー接点制御スイッチをDIP-31のリアパネルのターミナルブロックに接続して、 デバイスを制御できます。

図 4 は、ターミナルブロックから接点制御スイッチへの接続を示しています。



図 4 : リモートスイッチターミナルブロック

No	名称	機能
1	PC/HDMI:入力選択/VGA位相シフト調整	短押し:入力トグル 長押し:VGA位相シフトの調整 (11ページのVGA位相シフトを参照)
2	STEP IN	必要に応じて、ステップイン機能を使用します
3	音量 増:アナログ音声出力音量アップコントロール (12ページのアナログオーディオ出力ボリュームコントロール を参照)	短押し:音量を1段階上げます 長押し:音量を上げます 10秒で-83dBから24dBまで
4	音量 減:アナログ音声出力音量ダウンコントロール (12ページのアナログオーディオ出力ボリュームコントロール を参照)	短押し:音量を1段階下げます 長押し:音量を下げます 10秒で24dBから-83dBまで
G	GND	スイッチの共通GND側に接続します

RJ-45コネクターの配線

このセクションでは、RJ-45 コネクタを備えたストレート ケーブルを使用して、TP ピン配列を定義します。

EIA /TIA 568B				
ピン	配線色			
1	オレンジ / 白			
2	オレンジ			
3	緑色 / 白			
4	青			
5	青/白			
6	緑色			
7	茶色/白			
8	茶色			



操作方法

DIP-31は、以下に説明するルールに基づいて映像及び音声入力を選択します。

入力選択

映像モードの選択は、DIPスイッチによって次のいずれかのモードに変更されます。 (13ページのDIPスイッチの設定を参照)

- ・マニュアル
- ・自動-ラスト接続モードまたは優先モード

マニュアルモードでは、入力にライブ信号が存在するかどうかに関係なくスイッチングが行われます。 次のいずれかの方法を使用して、入力を手動で選択します。

- ・フロントパネルボタン
- ・リモート入力選択スイッチ
- ・RS-232 制御
- ・ウェブページ

自動モードでは、スイッチングの選択はラスト接続された入力または優先入力のいずれかに基づいて 行われます。

ラスト接続モードでは、現在の入力の信号が失われると、DIP-31は自動的に最後に接続された入力を 選択します。(設定可能な信号損失タイムアウトに応じた遅延)

優先モードでは、何らかの理由で入力同期信号が失われた場合、ライブ信号が存在する次の優先順位の入力が自動的に選択されます。(設定可能な信号喪失タイムアウトに応じた遅延) この優先度は設定可能です。デフォルト設定はHDMI1 HDMI2 PCです。

 (\mathbf{i})

ラスト接続モードと優先モードの双方で、入力を手動で選択すると、(リモート入力選択スイッチ) または上記の方法のいずれかを使用して)自動選択に上乗せされます。

信号損失とケーブルの取り外しタイムアウト

ラスト接続モードと優先モードの両方で、入力信号の同期が失われた場合(ただし、ケーブルが 取り外されていない場合)、デフォルトの遅延があり(ビデオの場合は10秒、PC入力には適用 されません。アナログ音声の場合は5秒)他の入力が自動的に選択されます。 入力ケープルを外すと、オートスイッチングが行われるまでに遅延が発生します。

両方のタイムアウトは設定可能です。(13ペ ジのDIPスイッチの設定を参照)

i

"音声のみ"モードが有効になっている場合、ディスプレイがない場合はアナログ音声は出力 されません。ディスプレイが接続されている場合、映像信号がない場合でもアナログ音声が 出力されます。

オーディオ信号制御

オプション DIPスイッチ 3 および 4 (13ページのDIPスイッチの設定を参照)による 音声処理方法の制御。

次の表に、出力にエンベッドされているオーディオ信号を示します。

選択された ビデオ入力	HDMI エンベッド音声検出	アナログ音声検出	DIP- スイッチ 3	DIP- スイッチ 4	HDMI 出力の音声
VGA	N/A	Yes	N/A	N/A	アナログ音声
VGA	N/A	No	N/A	N/A	音声無し
HDMI	N/A	N/A	マニュアル	エンベッド	音声エンベッド
HDMI	N/A	N/A	マニュアル	アナログ	アナログ音声
HDMI	Yes	No	自動	N/A	音声エンベッド
HDMI	Yes	Yes	自動	内蔵	音声エンベッド
HDMI	Yes	Yes	自動	アナログ	アナログ音声
HDMI	No	Yes	自動	N/A	アナログ音声
HDMI	No	No	自動	N/A	音声無し

オーディオ信号はあるがビデオ信号がない場合、出力はアナログ音声信号と組み合わせて 黒いビデオパターンです。

VGA位相シフト

入力VGA信号の位相を最小限に抑えるために、次の方法を使用してVGAサンプリング位相を シフトできます。

- ・フロントパネルのPC IN 選択ボタンを長押しします。 長押しするたびに、位相が0から31に向かって1ステップ上にシフトします。 31に設定し、もう一度長押しすると0にシフトします。
- ・リモートターミナルブロックのピン1とGに接続されたリモートの接点スイッチ 長押しするたびに位相が0から31に向かって1ステップ上にシフトします。 31に設定し、もう一度長押しすると0にシフトします。
- ・ウェブページを使用。(15ページのウェブページを使用したDIP-31のリモート操作を参照)
- ・RS-232 を経由のプロトコル3000コマンド(34ページのプロトコル3000を参照)



DIP-31の操作

DIP-31は、次のいずれかの方法で操作できます。

- ・フロントパネルボタン
- ・リモート接点閉鎖スイッチ(9ページのリモートコントロールスイッチに接続するを参照)
- ・ウェブページ (15 ページのウェブページを使用したDIP-31のリモート操作を参照)
- ・プロトコル 3000 コマンド (34ページのプロトコル3000を参照)

EDIDのロック

EDIDをロックして、保存されたEDID(デフォルトまたはデバイスからの読み取り)が 上書きされないようにするには:

・プロトコル 3000 コマンドを送信する。(34ページのプロトコル3000を参照)

・ウェブページを使用する。(24ページのEDID管理ページを参照)

DIP-31のリセット

DIP-31は、次のいずれかの方法で工場出荷時のデフォルトにリセットできます。

- ・リアパネルのボタンを使用する。
- ・ウェブページを使用する。(18ページのデバイス設定ページを参照)

DIP-31のソフトリセットを実行するには:

・リセットボタンを短く押します。 デバイスがリセットされます。

DIP-31を工場出荷時のデフォルトパラメーターにリセットするには:

・リセットボタンを5秒間押し続けます。 デバイスは工場出荷時のデフォルトパラメーターにリセットされます。

アナログ音声出力音量調整

アナログ音声出力の音量は、様々な方法で制御できます:

- ・ウェブページを使用する。(15ページのDIP-31 ウェブページの閲覧を参照)
- ・リモートターミナルブロックのピン3 および 4に接続されたリモートの接点制御スイッチを使用する。 (9ページのリモートコントロールスイッチの接続を参照)
- ・プロトコル3000コマンドを使用して音量を制御します。(55ページのオーディオコマンドを参照)

🚺 音量は-83dBから24dBまで0.5dB刻みで調整可能です。

DIP-31の設定

DIPスイッチの設定

4極DIPスイッチは、多くのデバイス機能に対する設定機能を提供します。 下がっているスイッチがオンになっています。上がっているスイッチはオフです。 デフォルトではすべてのスイッチが上がって(オフ)いる状態です。



図 6 : DIPスイッチ構成

() DIPスイッチを変更した後、変更を実行するにはデバイスの電源を入れ直す必要があります。

映像スイッチングの選択

DIP-スイッチ 1	DIP-スイッチ 2	映像入力 選択
オフ (上)	オフ (上)	自動 - ラスト接続 複数のソースが接続されている場合、最後に接続された ソースが優先されます。
オフ (上)	オン (下)	自動 - 優先選択 HDMI 1 HDMI 2 PC IN (デフォルト、優先度の高いものから低いものへ)
オン (下)	オフ (上)	マニュアル
オン (下)	オン (下)	マニュアル

音声スイッチングの選択

DIP-スイッチ 3	DIP-スイッチ 4	音声入力 選択
オフ (上)	オフ (上)	自動 - 優先選択
		HDMI エンベッド アナログ音声入力
		(優先度の高いものから低いものへ)
オフ (上)	オン (下)	自動 - 優先選択
		アナログ音声入力 HDMIエンベッド
		(優先度の高いものから低いものへ)
オン (下)	オフ (上)	HDMIエンベッド
オン (下)	オン (下)	アナログ音声入力

スイッチングタイムアウト

DIP-31がオートスイッチングに設定されている場合、タイムアウト(新しい入力が自動的に選択 されます)は、次の表に示すように変更できます。

(ウェブページの遅延設定については、21ページの制御設定ページを参照)

以下のスイッチングタイムアウトはHDMI専用であり、VGA(PC映像)ではありません。

タイムアウト	最小値	デフォルト値
信号損失時のスイッチング遅延(信号オフ、5V電源オン)	5秒	映像入力の 場合は10秒、 音声入力の 場合は5秒
ケーブルを抜いた時のスイッチング遅延(信号オフ、電源オフ)	0秒	0秒
信号損失時に5V電源オフを遅延させます。(遅延は信号損失時のスイッチング遅延よりも大きくする必要があります)	少なくとも上記の2つの値 (信号損失タイムアウトと ケーブルを抜いた時の タイムアウト)の大きい方に 等しい必要があります。	900 秒

例えば、

次の場合:信号喪失時の遅延切り替え = 15 秒

および/または:ケーブルの抜き差しによる切り替えの遅延 = 30 秒 次に:信号喪失時の 5V 電源オフの遅延は 30 秒以上である必要があります

ステップイン機能を使用する

ステップイン機能を使用できるようにするには、制御するHDMI リンクを介して送信されるRS-232信号 を割り当てる必要があります。(17ページのスイッチングページを参照)フロントパネルのステップイン ボタンは、互換性のあるスイッチャー(例えば、VS-62H等)と連動して動作するようになりました。

ウェブページを使用したDIP-31の リモート操作

DIP-31は、内蔵ウェブページを使用してリモートで操作できます。ウェブページは、ウェブブラウザー とイーサネット接続を使用してアクセスします。

接続を試みる前に:

・ブラウザーがサポートされていることを確認します。(28ページの仕様を参照) ・JavaScriptが有効になっていることを確認します。

(i)

シンタックスがゼロの数値を書き込む構文は、8進数として解析されます。 例えば、0123 は10進数83を表します。

🚺 ウェブページは、最小解像度1024 x 768 で動作します。

DIP-31 ウェブページの閲覧

 ウェブページが正しく更新されない場合は、次の方法でウェブブラウザーのキャッシュをクリア してください。 CTRL+ F5 を押します。

DIP-31のウェブページを閲覧するには:

- 1.インターネットブラウザーを開きます。
- 2.デバイスの IP 番号 (28ページデフォルトのIPパラメーターを参照) ブラウザーの アドレスバーに入力します。

🔊 http://192.168.1.39	~
-----------------------	---

 (\mathbf{i})

認証が有効になっている場合、次のウィンドウが表示され(図7)、ウェブページに アクセスするには有効なユーザー名(Admin)とパスワード(Admin)を入力する必要があります。

Authentication	n Required	×
?	A username and password are being requested by http://192.168.1.39. The site says: ".	
User Name:]
Password:	1	
	OK Cancel	

図7: ログオン資格情報の入力

ログオンが成功すると、Switchingページが表示されます(図8)。

Kramer DIP-31	Controller - Maestro	1	X
Switching			
Device Settings	Switching		
Control Settings	Manual Input Selection volume		
Video & Audio Settings	1: HDMI 1		
Authentication	2: HDMI 2		
EDID Management	3: VGA •		
Firmware Upgrade	VGA Phase change		
About	+1 +31 0.0 dB Audio: Embedded	ß	

左側のページパネルを開くには、表示ボタン?をクリックします。

図8:メイン切り替えページ

メインのスイッチングページ領域について、次の表で説明します。

項目	説明
ページ選択パネル	ボタンの1つをクリックして、ページを選択します。
スイッチングの選択	スイッチングおよび制御セクション ボタンの1つをクリックして、映像入力を選択します。 VGA位相シフトを調整します。音量を調整します。データルーティングモードを選択します。
非表示/表示ボタン	クリックして、ページ選択項を表示または非表示にします。

以下のセクションで説明する8つのウェブページがあります。

- ・15ページのDIP-31ウェブページの閲覧
- ・17ページのスイッチングページ
- ・18ページのデバイス設定
- ・21ページの制御設定
- ・22ページの映像と音声の設定
- ・23ページの認証
- ・24ページのEDID管理
- ・26ページのファームウェア更新
- ・27ページのAboutページ

スイッチングページ

スイッチングページでは、映像入力を手動で選択し音声の音量を調整できます。

Sw	vitching		
	Manual Input Selection 1: HDMI 1	•	volume +24 dB
	2: HDMI 2	•	O dB
	3: VGA VGA Phase change	•	
	Audio: Embedded	 +31	83 dB 0.0 dB

図9:スイッチングページ

項目	説明
HDMI 1ボタン	クリックしてHDMI1入力を選択します。 ボタンの色は、入力にライブ信号があるか どうかを示します。
HDMI 2ボタン	クリックして HDMI 2 入力を選択します。
VGAボタン	クリックして VGA 入力を選択します。
VGA フェーズ調整 スライダー	クリックして左または右にスライドし、VGA のフェーズを調整します。
音声ソース: インジケーター	出力で出力される音声のソースを示します。 (13ページのDIPスイッチの設定を参照)
音量スライダー	クリックして上下にスライドすると、音声出力の音量が増減します。
ミュート/ミュート解除ボタン	クリックして、出力音声をミュートまたはミュート解除します。

デバイス設定ページ

デバイス設定ページでは、次のことができます:

- ・ユニット名を設定し、モデル名、ファームウェアバージョン、シリアル番号および MACアドレスを表示します。
- ・IP設定を編集します。 (例えばDHCPを有効にし、IP、マスク、ゲートウェイアドレス、 UDP または TCP ポートを設定します)
- ・設定を保存して読み込みます。
- ・デバイスを工場出荷時のデフォルト設定にリセットします。

デバイス設定ページでパラメーターを変更した後、デバイスの電源を入れ直して変更を 有効にする必要があります。

Device Setti	ngs			
Unit name	DIP-31-0059 Set			
Model	DIP-31			
Firmware version Serial number	2.11.47548 11180261000059			
Ethernet Settings	Ethernet Settings			
DHCP	ON OFF			
IP address	192 . 168 . 1 . 39			
Mask address	255 . 255 . 0 . 0			
Gateway address	192 . 168 . 0 . 1			
	Set			
Mac address	00-1d-56-04-c1-86			
UDP port	50000 🗘 Set			
TCP port	5000 🗘 Set			
All settings	Load Save			
	Factory reset			

図 10:デバイス設定ページ

項目	説明
ユニット名	DIP-31の分かりやすく認識しやすい名前を入力してください。
モデル	デバイスのモデル名を表示します。
ファームウェバージョン	デバイスのファームウェアバージョンを表示します。
シリアル番号	デバイスのシリアル番号を表示します。
イーサネット設定	
DHCP ON/OFF ボタン	オンをクリックしてDHCPをオンにします。オフをクリックしてDHCPをオフにし、静的 IPアドレスを使用します。
IP アドレス	デバイスのIPアドレス。新しいIPアドレスを設定するには、新しい有効なIPアドレスを 入力して設定をクリックします。
マスクアドレス	デバイスのネットワークマスク。新しいマスクを設定するには、新しい有効なマスクを 入力して設定をクリックします。
ゲートウェイアドレス	デバイスのネットワークゲートウェイ。新しいネットワークゲートウェイを設定するには、 新しい有効なゲートウェイを入力して設定をクリックします。
MAC アドレス	MACアドレスを示す読み取り専用フィールド
UDP ポート	デバイスの UDPポート番号。新しいUDPポート番号を設定するには、新しい有効な ポート番号を入力するか、スピンコントロールを使用して設定をクリックします。
TCP ポート	デバイスのTCPポート番号。新しいTCPポート番号を設定するには、新しい有効な ポート番号を入力するか、スピンコントロールを使用して設定をクリックします。
すべての設定	
ロード & 保存ボタン	ロードをクリックして以前に保存した構成を取得し、保存をクリックして現在の構成を 保存します。(19ページの設定のロードと保存を参照)
	IP は設定ファイルに保存されません。
工場出荷時リセットボタン	クリックして、デバイスを工場出荷時のデフォルトパラメーターにリセットします。 成功メッセージが表示されたらデバイスの電源をオフにしてからオンにします。 (20ページのユニットのリセットを参照)

設定のロードと保存

DIP-31は、接続されたPCファイルとの間でデバイス設定をロードおよび保存できます。 これは、複数のDIP-31デバイスをセットアップするときに特に役立ちます。

設定をロードするには:

- 1 . [Load] をクリックします。 ファイルアップロードブラウザウィンドウが表示されます。
- 必要なファイルを参照し[Open]をクリックします。
 設定が取得され、成功メッセージが表示されます。

現在の設定を保存するには:

- [Save] をクリックします。
 設定の保存成功メッセージが表示されます。
- 2 . [Download] をクリックして、ファイルを開くか必要な場所に保存します。 または

[OK] をクリックして手順を完了します。



IP アドレスは設定ファイルに保存されません。

ユニットのリセット

DIP-31を工場出荷時のデフォルトパラメーターにリセットするには:

[Factory Reset] ボタンをクリックします。
 確認メッセージが表示されます。

)[Cancel]をクリックすると、変更を加えずにリセット手順が終了します。

- 2. [OK] をクリックします。 進行状況メッセージが表示されます。完了すると、成功メッセージが表示されます。
- 3.[OK]をクリックします。

コントロール設定ページ

コントロール設定ページを使用して、Kramer Maestro ルームオートメーションにアクセスします。 Maestroは、複雑なプログラミングを必要とせずに、シングルトリガールーム エレメント オートメーション シナリオを構成できる強力なツールです。ルームーオートメーションを使用するには、イベント時に、定義された ポートを介して実行される一連のアクション (さまざまなシナリオで表示される可能性のあるコマンド)を含む スクリプトを実行するトリガーを定義する必要があります。

クレイマーのウェブサイトからKramer Maestroユーザーマニュアルをダウンロードします。 Kramer Maestroの使用方法については、www.kramerav.com/downloads/DIP-31 をご覧ください。

(i)

DIP-31 に関連するすべてのポート、アクション、トリガー、および他の Kramer デバイスに関連するポート、 アクション、トリガーが Kramer Maestro に含まれていることに注意してください。

) オートメーションページのパネルタブは現在使用できません。

Kramer Maestroにアクセスするには:

1.ナビゲーション区画で、コントロール設定ページを選択します。 マエストロページが表示されます。

	· Contral			Cancel Sa	
emote Devic	e Control			Cuncor	ave
Ports			•	Editor	
Name RS232	Type RS-232	Details 9600,1,None,8		Select an item to edit	
Commands					
Name					
Name Actions			0	Triggers	
Name Actions Name	# C0	mmand rows	0	Triggers Trigger Action to run	

図 11 : オートメーション - Maestroページ

 Kramer Maestro ユーザー マニュアルの説明に従って、ポート、アクション、スクリプト、 およびトリガーを構成します。

トリガーが定義されると、トリガーは自動化ページで構成されたスクリプトをアクティブ化します。 たとえば、スケジューリング トリガーを使用すると、事前に設定されたスケジュールに従って一連の アクションをアクティブ化できます。

映像と音声の設定ページ

映像と音声の設定ページでは、映像、音声およびタイムアウトのパラメーターを変更できます。

Video & Audio Settings	3
Video	
Video selection mode	Auto: Last connected
Video auto switching priority	HIGH HDMI 1 HDMI 2 VGA
Audio	Drag to orange the promy
Audio selection mode	Auto: Priority switching
Current selection	Embedded
Audio only mode	Enabled Disabled
HDCP Support	
HDMI 1	Enabled Disabled
HDMI 2	Enabled Disabled
Timeout	
	Video Audio
Delay switching upon signal loss for (leave 5v ON)	10 sec 🗘 5 sec 🗘
Delay switching input upon cable unplug for	Osec
Delay power off 5v upon signal loss for	900 _{sec} 🔷
	Set Timeout

図 12 : 映像と音声の設定ページ

項目	説明
映像選択モード(Video selection mode)インジケーター	マニュアル、オートまたはラスト接続:現在の映像選択モード状況を示します。
映像オートスイッチング優先度設定	オートモードで使用するために、ボタンをクリックして必要な優先レベルに
(Video auto switching priority)ボタン	ドラッグします。
音声選択モード(Audio selection mode)インジケーター	マニュアル、オートまたはラスト接続:現在の音声選択モード状況を示します。
現在の音声選択(Current selection Audio)インジケーター	エンベッド又はアナログ、現在の音声選択状況を示します。
音声のみモード	音声のみモードを有効/無効にする場合に選択します。 無効 - 音声のみモードが無効になります
(Audio only mode)ボタン	有効 - 音声のみモードが有効になります。
	有効にすると、入力に映像信号がない場合デバイスは黒いパターンを出力し、 アナログ音声入力は、音声信号を入力し続けます。
HDCPサポート(HDMI入力用)ボタン	HDMI 1 および HDMI 2入力のHDCPサポートを選択します。 無効 - HDCP暗号化コンテンツは渡されません。
	有効 - HDCPのサポートはディスプレイによって決定されます。
Delay switching upon signal loss for (leave 5V on)	現在選択されている入力で信号損失が発生した場合に、切り替える前の映像と音声の遅延 を設定します (オートモード)。 秒単位 (10ページの「信号損失とケーブルの取り外しタイムアウト」を参照)
Delay switching input upon cable unplug for	現在選択されている入力ケーブルが接続されていないため、切り替え前の映像と音声の遅延 を設定します (オートモード)。 秒単位 (10ページの「信号損失とケーブルの取り外しタイムアウト」を参照)
Delay power off 5V upon signal loss for	現在選択されている入力で信号が失われたために 5V 出力をオフにするまでの遅延を設定 します。 秒単位(10ページの「信号損失とケーブルの取り外しタイムアウト」を参照)

認証ページ

認証ページでは、ログオン認証の詳細を設定および変更することができます。

Authentication		
Activate Security		Enabled Disabled
Change Password:	Current New Retype New	
		Change

図 13 : 認証ページ

項目		説明
Activate Securityボタン		クリックしてセキュリティー設定を有効/無効にします。有効にした場合、 ウェブページへのアクセスを許可するには有効なユーザー名とパスワードを 指定する必要があります。
	Current	現在のパスワードを入力します。
Change Password	New	新しいパスワードを入力します。(最大15個の印刷可能なASCII文字)
	Retype New	新しいパスワードを再入力
Changeボタン	·	Changeをクリックして、新しい認証情報を保存します。

EDID 管理ページ

EDID管理ページでは、EDIDデータを以下のソースから1つ以上の入力にコピーできます:

- ・出力
- ・入力
- ・デフォルトの EDID
- ・EDID データファイル

このページから、各入力のEDIDを個別にロックすることもできます。

EDID Management	
Input Input 3 Input 1 Input 2 DIP-31 1280x720 Audio 268 268 258 Output 128	Copy to Un/Select All
Default Default DIP-31 1280x720 Audio 256 File ✓ Prevent device modification data	Вутеттар

図 14 : EDIDページ

デバイスでEDIDのステータスが変更されても表示は自動的に更新されません。
 出力が交換されることによって引き起こされます。
 更新をクリックして表示を更新します。(次の表の最後の項目を参照)

項目		説明
	DEFAULT EDID ボタン	クリックしてデフォルトのEDIDを読み取ります。
Read from	Output ボタン	クリックして出力 1 からEDIDを読み取ります。
セクション	Input 1 ボタン	クリックして入力 1 からEDIDを読み取ります。 (HDMI 1)
	Input 2 ボタン	クリックして入力 2 からEDIDを読み取ります。 (HDMI 2)
	Input 3 ボタン	クリックして入力 3 からEDIDを読み取ります。 (VGA)
	BROWSE ボタン	クリックしてファイルブラウザを開き、コンピューター上の
		EDIDファイルを選択します。
Short Summary	Information	EDID の送信元、宛先、ビデオ解像度、オーディオの可用性
(短い要約情報)) セクション	およびステータスを表示します。
Inputs selection ボックス		チェックして両方の入力を選択
Copy to	Lock ボタン	現在選択されている入力の EDID をロックする
セクション	Input 1 ボタン	宛先として入力1(HDMI1)をクリックして選択
	Input 2 ボタン	宛先として入力 2 (HDMI 2)をクリックして選択
	Input 3 ボタン	宛先として入力 3 (VGA)をクリックして選択
COPYボタン		クリックして選択したソースから選択した宛先にEDIDをコピーします
REFRESHボタン		クリックして表示を更新します

EDIDデータをソースから一方または両方の入力にコピーするには:

- 1. EDID(デフォルト、出力、入力またはEDIDファイル)を読み取るソースボタンをクリックします。 ボタンの色が変わり、EDIDの概要情報に選択とEDIDデータが反映されます。
- 2. 宛先入力をクリックするか、入力チェックボックスをオンにしてすべての入力を選択します。 選択したすべての入力ボタンの色が変わり、EDIDの概要情報に選択とEDIDデータが反映されます。
- [Copy]をクリックします。
 EDIDがコピーされましたの成功メッセージが表示され、EDIDデータが選択した入力にコピーされます。

4 . [OK]をクリックします。

ファームウェア更新ページ

ファームウェア更新ページでは、DIP-31ソフトウェアを最新バージョンに更新できます。

Firmware Upgrade			
Firmware version	2.11.47548		
Update Firmware	Update		

図 15 : ファームウェア更新ページ

ファームウェアを更新するには:

- [Browse]をクリックします。
 ウィンドウズブラウザが開きます。
- 2.必要なファイルを参照します。
- 3.必要なファイルを選択し、[Open]をクリックします。
 ファームウェアファイル名は、ファームウェア更新ページに表示されます。
- 4 . [Start Upgrade]をクリックします。 ファームウェファイルが読み込まれ、プログレスバーが表示されます。

【】 プロセスを中断しないでください。中断すると、DP-31が破損する可能性があります。

5.プロセスが完了したら、デバイスを再起動します。 ファームウェアが更新されます。

About USページ

DIP-31 WEBページには、ウェブバージョンとクレイマーエレクトロニクス社詳細情報が表示されます。



図 16 : About US ページ

仕様

入力:	映像:	2 HDMI HDMIコネクタ		
	1 PC映像 HD15ピンコネクタ			
	音声:	1 アンバランスステレオ音声 1V RMS(公称レベル) 3.5ジャック		
出力:	映像:	1 HDMI HDMIコネクタ		
	音声:	1 アンバランスステレオ音声 1V RMS(公称レベル) 3.5ジャック		
ポート:	1 RS-232 3	ピンターミナルブロック 外部機器制御用 (例:ディスプレイ等)		
	1 100Base1	- イーサネット RJ-45コネクタ		
	1 RS-232 3ピンターミナルブロック シリアル制御用			
	1 USB ミニ!	JSB コネクタ		
コントロール:	4 接点制御ス	マイッチ用 5ピンターミナルブロック リモート機器操作用		
映像:	最大データレ	-ト: 10.2Gbps (各映像系統につき 3.4Gbps)		
	最大解像度:	4K@60Hz (4:2:0) 24bpp		
	HDMI対応:	Deep color、x.v.Color、lip sync、HDMI非圧縮音声チャネル、		
	Dolby Truel	HD、DTS HD、2K、4K、およびHDMI 2.0で定められた3D		
	規格準拠:H	DCP1.4		
アナロク音声:	最大レベル:3.1Vpp			
	IHD: 0.013%			
	SNEC : - / Uab			
電源:	電源:12V DC2A			
	消費電力:12V DC、600mA			
動作温度:	0° ~ +40°C			
保存温度:	-40° ~ +70	O°C		
湿度:	10% ~ 90%、RHL 結露無き事			
冷却:	自然空冷			
筐体素材:	アルミニウム			
寸法:	18.75cm x 11.5cm x 2.54cm (幅、奥行、高さ)			
重量:	約0.43kg			
梱包寸法:	34.5cm x 16.5cm x 5.2cm (幅、奥行、高さ)			
梱包重量:	約1.03kg			
環境および適合法規制:	RoHs、WEEE、および CE			
付属品:	雪酒マダイタ	7		
· ⊢⊣ •	电//ボフラフラ			

デフォルト IP パラメータ

パラメータ	值	デフォルト値
Device Name	Any alphanumeric string up to 14 chars (can include hyphen, but not at the beginning or end)	KRAMER_
DHCP	ON/OFF	OFF
IP Address	Any valid IP address	192.168.1.39
Mask	Any valid network mask	255.255.0.0
Gateway	Any valid gateway address	192.168.0.1
TCP Port	0 to 65535	5000
UDP Port	0 to 65535	50000

デフォルト RS-232 通信パラメータ

パラメータ	値
Baud Rate	115200
Data Bits	1
Stop Bits	1
Parity	None
Command Format	ASCII

デフォルト ログイン認証情報

パラメータ	値
Name	Admin
Password	Admin

HDMI 対応解像度

解像度	リフレッシュレート (Hz)
640x480p	85Hz; 75Hz; 72Hz; 60Hz; 59.95Hz
720x480p	60Hz
720x480i	30Hz
720x576p	50Hz
800x600p	85Hz; 75Hz; 72Hz; 60Hz
848x480p	60Hz
852x480p	60Hz
1024x768p	85Hz; 75Hz; 70Hz; 60Hz
1152x864p	75Hz
1280x768p	60Hz
1280x800p	60Hz
1280x960	60Hz
1280x1024p	75Hz; 60Hz
1360x768p	60Hz
1366x768	60Hz; 50Hz
1400x1050p	60Hz
1440x900p	60Hz
1600x900p	60Hz
1600x1200p	60Hz
1680x1050p	60Hz
1920x1080p	50Hz; 60Hz; 30Hz; 24Hz;
1920x1080i	50Hz; 60Hz;
3840x2160	30Hz
4096x2160	30Hz

VGA 対応解像度

解像度	リフレッシュレート
640x480p	60Hz
720x480p	60Hz
800x600p	60Hz
848x480p	60Hz
1024x768p	60Hz
1152x864	75Hz
1280x720p	60Hz; 50Hz
1280x768	60Hz
1280x800	60Hz
1280x960p	60Hz
1280x1024p	60Hz
1360x768	60Hz;
1366x768	60Hz; 50Hz
1400x1050	60Hz
1440x900	60Hz
1920x1080p	60Hz
1920x1200	60Hz

デフォルト EDID

DIP-31の各入力には、工場出荷時のデフォルトの EDID がロードされています。

HDMI

Monitor Model name.....DIP-31 Manufacturer...... KMR Plug and Play ID...... KMR1200 Serial number...... n/a Manufacture date...... 2015, ISO week 255 Filter driver...... None EDID revision..... 1.3 Input signal type...... Digital Color bit depth...... Undefined Display type..... RGB color Extension blocs...... 1 (CEA-EXT) -----DDC/CI.....n/a Color characteristics Default color space..... Non-sRGB Display gamma..... 2.20 Red chromaticity...... Rx 0.674 - Ry 0.319 Green chromaticity...... Gx 0.188 - Gy 0.706 Blue chromaticity...... Bx 0.148 - By 0.064 White point (default).... Wx 0.313 - Wy 0.329 Additional descriptors... None Timing characteristics Horizontal scan range.... 30-83kHz Vertical scan range..... 56-76Hz Video bandwidth..... 170MHz CVT standard...... Not supported GTF standard...... Not supported Additional descriptors... None Preferred timing....... Yes Native/preferred timing.. 1280x720p at 60Hz (16:10) 720 x 400p at 70Hz - IBM VGA 720 x 400p at 88Hz - IBM XGA2 640 x 480p at 60Hz - IBM VGA 640 x 480p at 67Hz - Apple Mac II 640 x 480p at 72Hz - VESA 640 x 480p at 75Hz - VESA 800 x 600p at 56Hz - VESA 800 x 600p at 60Hz - VESA 800 x 600p at 72Hz - VESA 800 x 600p at 75Hz - VESA 832 x 624p at 75Hz - Apple Mac II 1024 x 768i at 87Hz - IBM 1024 x 768p at 60Hz - VESA 1024 x 768p at 70Hz - VESA 1024 x 768p at 75Hz - VESA 1280 x 1024p at 75Hz - VESA 1152 x 870p at 75Hz - Apple Mac II 1280 x 1024p at 75Hz - VESA STD 1280 x 1024p at 85Hz - VESA STD 1600 x 1200p at 60Hz - VESA STD 1024 x 768p at 85Hz - VESA STD 800 x 600p at 85Hz - VESA STD 640 x 480p at 85Hz - VESA STD 1152 x 864p at 70Hz - VESA STD 1280 x 960p at 60Hz - VESA STD EIA/CEA-861 Information Revision number...... 3 IT underscan..... Supported Basic audio..... Supported YCbCr 4:4:4..... Supported YCbCr 4:2:2..... Supported Native formats...... 1 Detailed timing #1..... 1920x1080p at 60Hz (16:10) LPCM 2-channel, 16/20/24 bit depths at 32/44/48 kHz CE video identifiers (VICs) - timing/formats supported 1920 x 1080p at 60Hz - HDTV (16:9, 1:1) 1920 x 1080j at 60Hz - HDTV (16:9, 1:1) 1920 x 1080j at 60Hz - HDTV (16:9, 1:1) 1280 x 720p at 60Hz - HDTV (16:9, 1:1) [Native] 720 x 480p at 60Hz - EDTV (16:9, 32:27)

```
720 x 480p at 60Hz - EDTV (4:3, 8:9)
   720 x 480i at 60Hz - Doublescan (16:9, 32:27)
  720 x 576i at 50Hz - Doublescan (16:9, 64:45)
640 x 480p at 60Hz - Default (4:3, 1:1)
NB: NTSC refresh rate = (Hz*1000)/1001
CE vendor specific data (VSDB)
IEEE registration number. 0x000C03
 CEC physical address..... 1.0.0.0
Maximum TMDS clock...... 165MHz
CE speaker allocation data
 Channel configuration.... 2.0
 Front left/right..... Yes
 Front LFE..... No
 Front center..... No
Rear left/right..... No
Rear center..... No
Front left/right center.. No
 Rear left/right center... No
 Rear LFE..... No
Report information
Data source..... File
 Operating system...... 6.1.7601.2.Service Pack 1
Raw data
 00,FF,FF,FF,FF,FF,FF,00,2D,B2,00,12,00,00,00,00,FF,19,01,03,80,34,20,78,EA,B3,25,AC,51,30,B4,26,
10,50,54,FF,FF,80,81,8F,81,99,A9,40,61,59,45,59,31,59,71,4A,81,40,01,1D,00,72,51,D0,1E,20,6E,28,
 55,00,07,44,21,00,00,1E,00,00,00,FD,00,38,4C,1E,53,11,00,0A,20,20,20,20,20,20,00,00,00,FC,00,44,
49,50,2D,32,30,0A,20,20,20,20,20,20,02,3A,80,18,71,38,2D,40,58,2C,45,00,07,44,21,00,00,1E,01,A0,
02,03,1B,F1,23,09,07,07,48,10,05,84,03,02,07,16,01,65,03,0C,00,10,00,83,01,00,002,3A,80,18,71,
38,2D,40,58,2C,45,00,07,44,21,00,00,1E,01,1D,80,18,71,1C,16,20,58,2C,25,00,07,44,21,00,00,9E,01,
```

PC-UXGA

Monitor
Model name DIP-20
Manufacturer KMR
Plug and Play ID KMR1200
Serial numbern/a
Manufacture date 2015, ISO week 255
Filter driver None
input signal type Analog 0.700,000 (0.77 p-p)
Sync input support
Display type
Bower management Stark Szermini (24,0 m)
Extension blocs None
DDC/Cln/a
Color characteristics
Default color space sRGB
Display gamma 2.20
Red chromaticity Rx 0.674 - Ry 0.319
Green chromaticity Gx 0.188 - Gy 0.706
Blue chromaticity Bx 0.148 - By 0.064
White point (default) WX 0.313 - WY 0.329
Additional descriptors None
Timing characteristics
Horizontal scan range 30-83kHz
Vertical scan range 56-76Hz
Video bandwidth 170MHz
CVT standard Not supported
GTF standard Not supported
Additional descriptors None
Preferred timing Yes
Native/preferred timing 1280x720p at 60Hz (16:10)
Modeline "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync
Detailed timing #1 1920x1080p at 60Hz (16:10)
Modeline "1920x1080" 148.500 1920 2008 2052 2200 1080 1084 1089 1125 +nsync +vsync
Standard timings supported
720 x 400p at 70Hz - IBM VGA
720 x 400p at 88Hz - IBM XGA2
640 x 480p at 60Hz - IBM VGA
640 x 480p at 67Hz - Apple Mac II
640 x 480p at 72Hz - VESA
640 x 480p at 75Hz - VESA
800 x 600p at 56Hz - VESA
800 x 600p at 60Hz - VESA
800 x 600p at 72Hz - VESA
800 x 600p at 75Hz - VESA
832 x 624p at 75Hz - Apple Mac II
1024 x 768i at 87Hz - IBM
1024 x 768p at 60Hz - VESA
1024 x 768p at 70Hz - VESA
1024 X 768P at 75Hz - VESA
1280 X 1024p at 75HZ - VESA
1 IDZ X 0/UP AT /DHZ - Apple MAC II
1280 x 1024p at 75HZ - VESA STD

1280 x 1024p at 85Hz - VESA STD 1600 x 1200p at 60Hz - VESA STD 1024 x 768p at 85Hz - VESA STD 800 x 600p at 85Hz - VESA STD 640 x 480p at 85Hz - VESA STD 1152 x 864p at 70Hz - VESA STD 1280 x 960p at 60Hz - VESA STD

Raw data

00, FF, FF, FF, FF, FF, FF, 500, 2D, B2, 00, 12, 00, 00, 00, 00, FF, 19, 01, 03, 6E, 34, 20, 78, EE, B3, 25, AC, 51, 30, B4, 26, 10, 50, 54, FF, FF, 80, 81, 8F, 81, 99, A9, 40, 61, 59, 45, 59, 31, 59, 71, 4A, 81, 40, 01, 1D, 00, 72, 51, D0, 1E, 20, 6E, 28, 55, 00, 07, 44, 21, 00, 00, 1E, 00, 00, 0D, FD, 00, 38, 4C, 1E, 53, 11, 00, 0A, 20, 20, 20, 20, 20, 00, 00, 00, FC, 00, 44, 49, 50, 2D, 32, 30, 0A, 20, 20, 20, 20, 20, 20, 02, 3A, 80, 18, 71, 38, 2D, 40, 58, 2C, 45, 00, 07, 44, 21, 00, 00, 1E, 00, AF

プロトコル 3000

The **DIP-31** Automatic Video Switcher can be operated using the Kramer Protocol 3000 serial commands. The command framing varies according to how you interface with the **DIP-31**. For example, a basic video input switching command that routes a layer 1 video signal to HDMI out 1 from HDMI input 2 (ROUTE 1,1,2), is entered as follows:

• Terminal communication software, such as Hercules:

UDP Setup Serial TCP Client TCP Server UDP Test Mode A	bout	
UDP-Served Server Job Prior (IDP-Server UDP) rest Mode Al Received/Server Job Add #ROUTE 1,1,2-0184WITE 1,1 -0187WITE 1,0 -0187WITE 1,0 -0187WITE 1,0 -0187WITE 1,0 -0187WITE 1,1,2	000	Serial Name [COM3 w] Baud Baud J115200 w] Data size B Parity Parity Parity Mode Free
Modem lines OCD OF RI OF DSR OF CTS		S HWg FW update
Send		
##ROUTE 1,1.2 <cr></cr>	F HEX Send	HW group
	F HEX Send	www.HW-group.com
	HEX Send	Version 3.1.2



i

The framing of the command varies according to the terminal communication software.

• K-Touch Builder (Kramer software):



• K-Config (Kramer configuration software):

Command Syntax	Display Command as	C Hex	C Decimal	ASCII
"#ROUTE 1,1,2",0x0D			Set	Clear

All the examples provided in this section are based on using the K-Config software.

You can enter commands directly using terminal communication software (e.g., Hercules) by connecting a PC to the serial or Ethernet port on the **DIP-31**. To enter \overline{CR} press the Enter key (\overline{LF} is also sent but is ignored by the command parser).

Commands sent from various non-Kramer controllers (e.g., Crestron) may require special coding for some characters (such as, /x##). For more information, refer to your controller's documentation.

For more information about:

• Using Protocol 3000 commands, see <u>Understanding Protocol 3000</u> on page <u>35</u>.

- General syntax used for Protocol 3000 commands, see <u>Kramer Protocol 3000 Syntax</u> on page <u>36.</u>
- Protocol 3000 commands available for the DIP-31, see Protocol 3000 Commands on page <u>37.</u>

Understanding Protocol 3000

Protocol 3000 commands are structured according to the following:

- **Command** A sequence of ASCII letters (A-Z, a-z and -). A command and its parameters must be separated by at least one space.
- **Parameters** A sequence of alphanumeric ASCII characters (0-9, A-Z, a-z and some special characters for specific commands). Parameters are separated by commas.
- **Message string –** Every command entered as part of a message string begins with a message starting character and ends with a message closing character.



Ĭ

A string can contain more than one command. Commands are separated by a pipe (|) character.

The maximum string length is 64 characters.

Message starting character:

- For host command/query

~ - For device response

- Device address K-NET Device ID followed by @ (optional, K-NET only)
- Query sign -? follows some commands to define a query request
- Message closing character:

CR - Carriage return for host messages (ASCII 13)

CR LF - Carriage return for device messages (ASCII 13) and line-feed (ASCII 10)

• **Command chain separator character** – Multiple commands can be chained in the same string. Each command is delimited by a pipe character (|). When chaining commands, enter the message starting character and the message closing character only at the beginning and end of the string.

Spaces between parameters or command terms are ignored. Commands in the string do not execute until the closing character is entered. A separate response is sent for every command in the chain.

Kramer Protocol 3000 Syntax

The Kramer Protocol 3000 syntax uses the following delimiters:

- CR = Carriage return (ASCII 13 = 0x0D)
- LF = Line feed (ASCII 10 = 0x0A)
- SP = Space (ASCII 32 = 0x20)

Some commands have short name syntax in addition to long name syntax to enable faster typing. The response is always in long syntax.

The Protocol 3000 syntax is in the following format:

Host Message Format:

Start	Address (optional)	Body	Delimiter
#	Device_id@	Message	CR

• Simple Command – Command string with only one command without addressing:

Start	Body	Delimiter
#	Command SP Parameter_1,Parameter_2,	CR

• Command String – Formal syntax with command concatenation and addressing:

Start	Address	Body	Delimiter
#	Device_id@	Command_1 Parameter1_1,Parameter1_2,	CR
		Command_2 Parameter2_1,Parameter2_2,	
		Command_3 <i>Parameter3_1,Parameter3_2,</i>	

• Device Message Format:

Start	Address (optional)	Body	Delimiter
~	Device_id@	Message	CR LF

• Device Long Response – Echoing command:

Start	Address (optional)	Body	Delimiter
~	Device_id@	Command SP [Param1 ,Param2] result	CR LF

Protocol 3000 Commands

This section includes the following commands:

- System Commands (see <u>System Commands</u> on page <u>38</u>).
- Authentication Commands (see <u>Authentication Commands</u> on page <u>50</u>).
- Switching/Routing Commands (see <u>Switching/Routing Commands</u> on page <u>53</u>).
- Video Commands (see <u>Video Commands</u> on page <u>54</u>).
- Audio Commands (see <u>Audio Commands</u> on page <u>55</u>).
- Communication Commands (see <u>Communication Commands</u> on page <u>58</u>).
- EDID Handling Commands (see EDID Handling Commands on page 62).

System Commands

Command	Description
#	Protocol handshaking (system mandatory)
BUILD-DATE	Get device build date (system mandatory)
FACTORY	Reset to factory default configuration
HELP	Get command list (system mandatory)
MODEL	Get device model (system mandatory)
PROT-VER	Get device protocol version (system mandatory)
RESET	Reset device (system mandatory)
SN	Get device serial number (system mandatory)
VERSION	Get device firmware version (system mandatory)
AV-SW-MODE	Set/get auto switch mode (system)
AV-SW-TIMEOUT	Set/get auto switching timeout (system)
DISPLAY	Get output HPD status (system)
DPSW-STATUS	Get the DIP-switch status (system)
FPGA-VER	Get current FPGA version (system)
HDCP-MOD	Set/get HDCP mode (system)
HDCP-STAT	Get HDCP signal status (system)
NAME	Set/get machine (DNS) name (system – Ethernet)
NAME-RST	Reset machine (DNS) name to factory default (system – Ethernet)
PRIORITY	Set/get priority for all channels (system)
SIGNAL	Get input signal lock status (system)

#

Functions		Permission	Transparency	
Set:	#	End User	Public	
Get:	-	-	-	
Descriptior	1	Syntax		
Set:	Protocol handshaking	#CR		
Get:	-	-		
Response				
~nn@SP ok C	R LF			
Parameter	S			
Response Triggers				
Notes				

Validates the Protocol 3000 connection and gets the machine number Step-in master products use this command to identify the availability of a device K-Config Example

"#",0x0D

BUILD-DATE

Functions		Permission	Transparency	
Set:	-	-	-	
Get:	BUILD-DATE?	End User	Public	
Descriptior	1	Syntax		
Set:	-	-		
Get:	Get device build date	#BUILD-DATE?CR		
Response				
~nn@ BUII	D-DATESPdateSPtimeCR LF			
Parameters	3			
date-Fo	rmat: YYYY/MM/DD where YYYY = Year, M rmat: hh:mm:ss where hh = hours.mm = n	4 = Month, DD = Day ninutes. ss = seconds		
Response	Triggers			
•				
Notes				
K-Config Example				
"#BUILD-DATE?",0x0D				

FACTORY

Functio	ns	Permission	Transparency			
Set:	FACTORY	End User	Public			
Get:	-	-	-			
Descrip	tion	Syntax				
Set:	Reset device to factory default configuration	# FACTORY CR				
Get:	-	-				
Respor	se					
~nn@ F	ACTORYSPOKCR LF					
Parame	eters					
Respor	se Triggers					
Notes						
This command deletes all user data from the device. The deletion can take some time. Your device may require powering off and powering on for the changes to take effect.						
K-Config Example						
"#FAC	"#FACTORY", 0x0D					

HELP

Functi	ons	Permission	Transparency		
Set:	-	-	-		
Get:	HELP	End User	Public		
Descri	ption	Syntax			
Set:	-	-			
Get:	Get command list or help for specific command	1. #HELPCR 2. #HELPSPCOMM	MAND_NAMECR		
Respo	nse				
1. Mul comma 2. Mul	1. Multi-line: ~nn@Device available protocol 3000 commands:CR LFcommand,SP commandCR LF 2. Multi-line: ~nn@HELPSPcommand:CR LFdescriptionCR LFUSAGE:usageCR LF				
Param	Parameters				
COMMA	AND_NAME - name of a specific command				
Respo	nse Triggers				
Notes	Notes				
To get	To get help for a specific command use: HELPSPCOMMAND NAMECR LF				
K-Config Example					
"#HEI	P", OxOD				

MODEL

Functions		Permission	Transparency
Set:	-	-	-
Get:	MODEL?	End User	Public
Description		Syntax	
Set:	-	-	
Get:	Get device model	# model? CR	
Response			
~nn@MODEL	SPmodel_nameCR LF		
Parameters			
model_nam	e – String of up to 19 printable AS	CII chars	
Response T	riggers		
Notes			
This command identifies equipment connected to Step-in master products and notifies of identity changes to the connected equipment. The Matrix saves this data in memory to answer REMOTE-INFO requests			
K-Config Example			
"#MODEL?", 0x0D			

PROT-VER

Functions		Permission	Transparency		
Set:	-	-	-		
Get:	PROT-VER?	End User	Public		
Descriptio	n	Syntax			
Set:	-	-			
Get:	Get device protocol version	# prot-ver? CR			
Response	9				
~nn@ PRO	T-VER SP3000: <i>version</i> CR LF				
Paramete	rs				
version	- XX.XX where X is a decimal digit				
Response	e Triggers				
Notes					
K-Config	K-Config Example				
"#PROT-	"#PROT-VER?", 0x0D				

RESET

Functions		Permission	Transparency		
Set:	RESET	Administrator	Public		
Get:	-	-	-		
Description		Syntax			
Set:	Reset device	# reset CR			
Get:	-	-			
Response					
~nn@RESET	SP ok cr lf				
Parameters					
Response Tr	riggers				
Notes					
To avoid locl	To avoid locking the port due to a USB bug in Windows, disconnect USB connections immediately after				

running this command. If the port was locked, disconnect and reconnect the cable to reopen the port. K-Config Example

"#RESET",0x0D

SN

Functions		Permission	Transparency		
Set:	-	-	-		
Get:	SN?	End User	Public		
Description	on	Syntax			
Set:	-	-			
Get:	Get device serial number	# SN? CR			
Response					
~nn@ sn Si	Pserial_numberCR LF				
Parameter	S				
serial_r	number – 11 decimal digits, factory assigned				
Response	Triggers				
Notes					
This device has a 14 digit serial number, only the last 11 digits are displayed					
K-Config Example					
"#SN?",()x0D				

VERSION

Functions		Permission	Transparency		
Set:	-	-	-		
Get:	VERSION?	End User	Public		
Descriptio	n	Syntax			
Set:	-	-			
Get:	Get firmware version number	#VERSION?CR			
Response	9				
~nn@ ve F	SIONSPfirmware_versionCR LF				
Paramete	ers				
firmwar	re_version-XX.XX.XXXX where the digit group	s are: major.minor.bui	ld version		
Response Triggers					
Notes					
K-Config Example					
"#VERSION?", 0x0D					

AV-SW-MODE

Functions		Permission	Transparency		
Set:					
Get:	AV-SW-MODE?	End user	Public		
Descri	ption	Syntax			
Set:					
Get:	Get input auto switch mode (per output)	#AV-SW-MODE?SPlay	yer,output_idCR		
Respo	nse				
~nn@ #	V-SW-MODE SPlayer,output_id,modeCR_L	F			
Param	eters				
<pre>layer - 1 (video), 2 (audio) output_id - for video layer: 1 (HDMI Out), for audio layer: 1 (Audio Out) mode - 0 (manual), 1 (priority switch), 2 (last connected switch)</pre>					
Response Triggers					
Notes					
K-Config Example					
Get the ``#AV-	Get the input audio switch mode for HDMI Out: "#AV-SW-MODE? 1,1",0x0D				

AV-SW-TIMEOUT

Functions		Permission	Transparency
Set:	AV-SW-TIMEOUT	End User	Public
Get:	AV-SW-TIMEOUT?	End User	Public
Description		Syntax	
Set:	Set auto switching timeout	#AV-SW-TIMEOUT SPaction,time_outCR	
Get:	Get auto switching timeout	#AV-SW-TIMEOUT?SPactionCR	

Response

~nn@AV-SW-TIMEOUTSPaction,time_outCR

Parameters

action – event that triggers the auto switching timeout:

- 0 (video signal lost)
- 2 (audio signal lost)
- 4 (disable 5V on video output if no input signal detected)
- 5 (video cable unplugged)
- 6 (audio cable unplugged)
- timeout timeout in seconds: 0-60000

Response Triggers

Notes

The timeout must not exceed 60000 seconds.

The timeout for video and audio signal lost (0, 2) events must not be less than 5 seconds.

The timeout for video and audio cable unplugged (5, 6) events must not exceed the timeout for the disable 5V on video output if no input signal detected (4) event.

The timeout for the disable 5V on video output if no input signal detected (4) event must not be less than the timeout for video and audio cable unplugged (5, 6) events.

The timeout for the disable 5V on video output if no input signal detected (4) event overlaps with the timeouts for all other events (0, 2, 5, 6).

This does not apply to VGA input.

K-Config Example

Set the auto switching timeout to 5 seconds in the event of video signal lost:

"#AV-SW-TIMEOUT 0,5",0x0D

Functions	3	Permission	Transparency		
Set:	-	-	-		
Get	DISPLAY?	End User	Public		
Descripti	on	Syntax			
Set:	-	-			
Get:	Get output HPD status	#DISPLAY?SPou	t_idCR		
Respons	e				
~nn@ DISPLA	SPout_id,statusCR LF				
Paramete	ers				
out_id - 1 (HDMI Out) status - HPD status according to signal validation : 0 (Off), 1 (On), 2 (On and all parameters are stable and valid)					
Response Triggers					
A response is sent to the com port from which the Get was received, after command execution and: After every change in output HPD status from On to Off (0) After every change in output HPD status from Off to On (1) After every change in output HPD status form Off to On and all parameters (new EDID, etc.) are stable and valid (2)					
Notes					
K-Config Example					

Get the output HPD status of HDMI Out: "#DISPLAY? 1",0x0D

DPSW-STATUS

Functions		Permission	Transparency			
Set:	-	-	-			
Get	DPSW-STATUS?	End User	Public			
Descripti	on	Syntax				
Set:	-	-				
Get:	Get the DIP-switch status	#DPSW-STATUS? SPdp_	_sw_idCR			
Respons	e					
~nn@ DPSW-S	TATUS?SPdp_sw_id,statusCR_LF					
Paramete	ers					
Dp_sw_s	i d − 1 (video switch), 2 (video switch), 3 (a − 0 (up / Off), 1 (down / On)	audio switch), 4 (audio swi	tch)			
Respons	e Triggers					
Notes						
K-Config Example						
Get the status of DIP-switch 1 (video switch): "#DPSW-STATUS? 1",0x0D						

FPGA-VER

Functions		Permission	Transparency		
Set:	-	-	-		
Get:	FPGA-VER?	End User	Public		
Descriptio	n	Syntax			
Set:	-	-			
Get:	Get current FPGA version	#FPGA-VER?SPidCF	~		
Response					
~nn@ FPG	A-VER SPid,major_ver,minor_verCR LF				
Paramete	rs				
id-1(F	PGA)				
major_v	er – Major FPGA version number for current fir	mware			
minor_v	er – Minor FPGA version number for current fir	nware			
Response	Triggers				
Notes					
FPGA – field programmable gate array					
K-Config Example					
Get the FPGA version number for the current firmware: "#FPGA-VER? 1", 0x0D					

HDCP-MOD

Functions		Permission	Transparency	
Set:	HDCP-MOD	Administrator	Public	
Get:	HDCP-MOD?	End User	Public	
Description		Syntax		
Set:	Set HDCP mode	#HDCP-MODSPinp_id,mode(CR	
Get:	Get HDCP mode	#HDCP-MOD?SPinp_idCR		
Response				
Set / Get: ~	nn@ HDCP-MOD SPinp_id,mo	de <mark>CR LF</mark>		
Parameters	;			
inp_id-i	nput number: 1 (HDMI In 1), 2 CP mode: 0 (HDCP Off), 3 (Mir	(HDMI In 2), 3 (PC In)		
Response 1	Friggers			
A response is sent to the com port from which the set (before execution) / get command was received A response is sent to all com ports after command execution if HDCP-MOD was set by any other external control device (device button, device menu or other) or if the HDCP mode changed				
Notes				
Set HDCP working mode on the device input: HDCP not supported - HDCP Off HDCP support changes following detected sink - MIRROR OUTPUT				
K-Config Example				
Disable HDCP mode on HDMI In 2: "#HDCP-MOD 2,0",0x0D				

HDCP-STAT

Functions		Permission	Transparency		
Set:	-	-	-		
Get:	HDCP-STAT?	End User	Public		
Descript	ion	Syntax			
Set:	-	-			
Get:	Get HDCP signal status	#HDCP-STAT? SPstage,	stage_idCR		
Respons	se				
~ nn@ H	DCP-STAT SP <i>stage,stage_id,sta</i>	<i>tus</i> CR LF			
Paramet	ers				
stage-	0 (input), 1 (output)				
stage_	id-for input stage: 1 (HDMI In 1), 2	(HDMI In 2), for output stage	e: 1 (HDMI Out)		
status	- signal encryption status: 0 (Off), 1 (On)			
Respons	se Triggers				
A respor	nse is sent to the com port from which	the Get command was rece	ived		
Notes					
Output stage (1) – get the HDCP signal status of the sink device connected to HDMI Out					
Input stage (0) – get the HDCP signal status of the source device connected to the specified input					
K-Config Example					
Get the North HDCP	Get the HDCP input signal status of the source device connected to HDMI In 1: "#HDCP-STAT? 0,1",0x0D				

NAME

Functions		Permission	Transparency	
Set:	NAME	Administrator	Public	
Get:	NAME?	End User	Public	
Description	ו	Syntax		
Set:	Set machine (DNS) name	#NAME SPmachine_name	CR	
Get:	Get machine (DNS) name	# NAME? CR		
Response				
Set: ~nn@	NAME SP <i>machine_name</i> CR LF			
Get: ~nn@	NAME?SPmachine_nameCR LF			
Parameter	s			
machine_name - String of up to 14 alpha-numeric characters (can include hyphens but not at the beginning or end)				
Response Triggers				
Notos				

Notes

The machine name is not the same as the model name. The machine name is used to identify a specific machine or a network in use (with DNS feature on).

K-Config Example

Set the DNS name of the device to "room-442": "#NAME room-442", 0x0D

NAME-RST

Functions		Permission	Transparency			
Set:	NAME-RST	Administrator	Public			
Get:	-	-	-			
Descri	ption	Syntax				
Set:	Reset machine (DNS) name to factory default	#NAME-RSTCR				
Get:	-	-				
Respo	nse					
~nn@N	AME-RSTSPOKCR LF					
Param	eters					
Respo	nse Triggers					
Notes	Notes					
Factory default of machine (DNS) name is "KRAMER_"						
K-Config Example						
Reset	Reset the DNS name of the device to the factory default: "#NAME-RST", 0x0D					

PRIORITY

Functior	าร	Permission	Transparency			
Set:	PRIORITY	Administrator	Public			
Get:	PRIORITY?	Administrator	Public			
Descript	tion	Syntax				
Set:	Set input priority	#PRIORITY SPlayer, PRIORITY. PRIORITY3CR	1,PRIORITY2,			
Get:	Get input priority	<pre># PRIORITY?layerCR</pre>				
Respons	se					
~nn@PRI	ORITY SPlayer,PRIORI	TY1,PRIORITY2,PRIORITY3CR I	.F			
Parame	ters					
layer - PRIORI PRIORI PRIORI layer - PRIORI PRIORI	<pre>layer - 1 (video): PRIORITY1 - priority of HDMI In 1: 1 (highest priority), 2 (second priority), 3 (third priority) PRIORITY2 - priority of HDMI In 2: 1 (highest priority), 2 (second priority), 3 (third priority) PRIORITY3 - priority of PC In: 1 (highest priority), 2 (second priority), 3 (third priority) layer - 2 (audio): PRIORITY1 - priority of embedded audio: 1 (highest priority), 2 (second priority) PRIORITY2 - priority of Audio In: 1 (highest priority), 2 (second priority)</pre>					
Respons	se Triggers					
Notes	Notes					
The number of PRIORITY parameters differs according to the selected layer 1 is the highest priority						
K-Config	K-Config Example					
Set the w W#PRIO	Set the video input priority of PC In as the highest priority: "#PRIORITY 1,2,3,1",0x0D					

SIGNAL

Functions		Permission	Transparency	
Set:	-	-	-	
Get	SIGNAL?	End User	Public	
Descriptio	n	Syntax	Syntax	
Set:	-	-		
Get:	Get input signal lock status	#SIGNAL?SPinp_ic	dCR	
Response	e			
~nn@signal	SPinp_id,statusCR LF			
Paramete	Parameters			
inp_id – input number: 1 (HDMI In 1), 2 (HDMI In 2), 3 (PC In)				
status – lock status according to signal validation: 0 (Off), 1 (On)				
Response Triggers				
After execution, a response is sent to the com port from which the Get was received				
A respons	A response is sent after every change in input signal status from On to Off or from Off to On			
Notes				
K-Config Example				
Get the input signal lock status of HDMI In 2: "#SIGNAL? 2", 0x0D				

Authentication Commands

Command	Description
LOGIN	Set/get protocol permission
LOGOUT	Cancel current permission level
PASS	Set/get password for login level
SECUR	Set/get current security state

LOGIN

Functions		Permission	Transparency	
Set:	LOGIN	Not Secure	Public	
Get:	LOGIN?	Not Secure	Public	
Descript	tion	Syntax		
Set:	Set protocol permission	#LOGIN SPlogin_level	,passwordCR	
Get:	Get current protocol permission level	# login? CR		
Respon	se			
Set: ~nr	@LOGINSPlogin_level,password	SP ok Cr lf		
or				
~n:	n@LOGINSPERRSP004CR_LF (if bad p	assword entered)		
Get: ~n:	Get: ~nn@loginSPlogin_levelCR LF			
Parameters				
login_level - level of permissions required: User, Admin				
password – predefined password (by PASS command). Default password is an empty string				
Response Triggers				
Notes				
When the permission system is enabled, LOGIN enables running commands with the User or Administrator permission level				
When set, login must be performed upon each connection				
The per enable t	The permission system works only if security is enabled with the SECUR command. It is not mandatory to enable the permission system in order to use the device			
K-Config Example				

Set the protocol permission level to Admin (when the password defined in the PASS command is 33333): "#LOGIN Admin, 33333", 0x0D

LOGOUT

Functions		Permission	Transparency
Set:	LOGOUT	Not Secure	Public
Get:	-	-	-
Description	on	Syntax	
Set:	Cancel current permission level	# logout CR	
Get:	-	-	
Respons	e		
~nn@ LOG	GOUTSPOKCR LF		
Parameters			
Response Triggers			
Notes			
Logs out from User or Administrator permission levels			
K-Config Example			
"#LOGOUT", 0x0D			

PASS

Functions		Permission	Transparency	
Set:	PASS	Administrator	Public	
Get:	PASS?	Administrator	Public	
Descript	tion	Syntax		
Set:	Set password for login level	#PASS SPlogin_level,p	asswordCR	
Get:	Get password for login level	#PASS? SPlogin_levelC	R	
Respon	se			
~nn@PA	~nn@ PASS SPlogin_level,passwordCR LF			
Parame	Parameters			
login_	<i>login_level</i> – level of login to set: User, Admin			
password – password for the login_level. Up to 15 printable ASCII chars.				
Response Triggers				
Notes				
The default password is an empty string				
K-Config Example				
Set the password for the Admin protocol permission level to 33333: "#PASS Admin, 33333", 0x0D				

SECUR

Functions		Permission	Transparency	
Set:	SECUR	Administrator Public		
Get:	SECUR?	Not Secure Public		
Descriptio	n	Syntax		
Set:	Start/stop security	# SECUR SPsecurity_mo	odeCR	
Get:	Get current security state	#SECUR?CR		
Response	9			
~nn@sec	~nn@ secur SPsecurity_modeCR LF			
Parameters				
security_mode - 1 (On / enable security), 0 (Off / disable security)				
Response Triggers				
Notes				
The permission system works only if security is enabled with the SECUR command				
K-Config Example				
Enable the permission system: "#SECUR 0", 0x0D				

Switching/Routing Commands

Command	Description
ROUTE	Set/get layer routing

ROUTE

Functions		Permission	Transparency		
Set:	ROUTE	End User	Public		
Get:	ROUTE?	End User	Public		
Descriptior	n	Syntax			
Set:	Set layer routing	#ROUTE SPlayer,dest,s	rcCR		
Get:	Get layer routing	#ROUTE? SPlayer,destC	R		
Response					
~nn@ROUTE	SPlayer,dest,srcCR LF				
Parameter	Parameters				
layer-1	layer – 1 (video)				
dest-1	dest – 1 (HDMI Out)				
src – 1 (HDMI In 1), 2 (HDMI In 2), 3 (PC In)					
Response	Triggers				
Notes					
The get command identifies input switching on Step-in clients					
The set command is for remote input switching on Step-in clients (essentially via by the Web)					
K-Config Example					
Set the remote input switching of video to HDMI Out from HDMI In 2: "#ROUTE 1,1,2",0x0D					

Video Commands

Command	Description
VGA-PHASE	Set/get ADC (VGA) sampling phase
VMUTE	Set/get video on output mute

VGA-PHASE

Functions		Permission	Transparency	
Set:	VGA-PHASE	End User	Public	
Get:	VGA-PHASE?	End User	Public	
Description		Syntax		
Set:	Set ADC (VGA) sampling phase	# VGA-PHASE SPchann	nel,valueCR	
Get:	Get ADC (VGA) sampling phase	#VGA-PHASE?SPchar	nnelCR	
Respon	se			
~nn@ v @	~nn@ VGA-PHASE SP <i>channel,value</i> CR LF			
Parame	Parameters			
channel – input number: 3 (PC In)				
value – phase number in LSB units: 1–30, ++ (increase current value), (decrease current value)				
Response Triggers				
Notes				
K-Config Example				
Increase the current value of the ADC (VGA) sampling phase: "#VGA-PHASE 3,++",0x0D				

VMUTE

Functions		Permission	Transparency	
Set:	VMUTE	End User	Public	
Get:	VMUTE?	End User	Public	
Descrip	tion	Syntax		
Set:	Set enable/disable video on output	# VMUTE SPoutput_	id,flag <mark>CR</mark>	
Get:	Get video on output status	# VMUTE? SPoutput	_idSP CR	
Respon	se			
Set / Ge	Set/Get: ~nn@VMUTESPoutput_id,flagCR LF			
Parame	Parameters			
output_id-1 (HDMI Out)				
flag – 0 (disable video on output), 1 (enable video on output), 2 (blank video)				
Response Triggers				
Notes				
K-Config Example				
Disable the video output on HDMI Out: "#VMUTE 3,0",0x0D				

Audio Commands

Command	Command Description	
AUD-EMB	Get audio in video embedding status	
AUD-LVL	Set/get volume for specific amplifier output	
AUD-SIGNAL?	Get audio input signal status	
MUTE	Set/get audio mute	

AUD-EMB

Functions		Permission	Transparency	
Set:				
Get:	AUD-EMB?	End User	Public	
Descriptio	n	Syntax		
Set:				
Get:	Get audio in video embedding status	#AUD-EMB?SPin,c	outCR	
Response	9			
~nn@ AUE	-EMBSPin,out,statusCR LF			
Paramete	ers			
in — emb	in – embedded audio input number: 1 (Audio In)			
out – video output number in which audio is embedded: 1 (HDMI Out)				
status – embedded status: 1 (On), 0 (Off)				
Response Triggers				
A respon	se is sent to the com port from which the get comm	and was received		
After execution, a response is sent to all com ports if AUD-EMB was set by any other external control				
device (b	utton press, device menu and similar)			
Notes				
K-Config	Example			
₩#AUD-Е	"#AUD-EMB? 1,1",0x0D			

AUD-LVL

Functions		Permission	Transparency	
Set:	AUD-LVL	End User	Public	
Get:	AUD-LVL?	End User	Public	
Descri	ption	Syntax		
Set:	Set volume for specific amplifier output	#AUD-LVL SP <i>stage</i> ,c	channel,volumeCR	
Get:	Get volume for specific amplifier output	#AUD-LVL? SPstage,	<i>channel</i> CR	
Respo	inse			
~nn@ 2	AUD-LVLSPstage, channel, volumeCR LF			
Param	neters			
stage	<i>stage</i> – 1 (audio output)			
chann	el – output channel number of selected stage: 1	(Audio Out)		
volum	e - audio volume: -83 to +24 (dB value), ++ (in	crease current value by	0.5dB),	
(de	(decrease current value by 0.5dB)			
Respo	nse Triggers			
Notes	Notes			
All val	All values are in percentages			
A minu	A minus sign precedes negative values			
K-Con	fig Example			
Set the volume of the Audio Out (1) output to 12 decibels: "#AUD-LVL 1,1,12",0x0D				

AUD-SIGNAL

Functions		Permission	Transparency	
Set:	-	-	-	
Get	AUD-SIGNAL?	End User	Public	
Descripti	on	Syntax		
Set:	-	-		
Get:	Get audio input signal status	# AUD-SIGNAL?SPi	np_idCR	
Respons	Response			
~nn@AUD-	~mm@AUD-SIGNALSPinp_id,statusCR LF			
Paramete	ers			
inp_id·	inp_id – audio input number: 1 (Audio In)			
status – 0 (Off / no signal), 1 (On / signal present)				
Response Triggers				
After exe	cution, a response is sent to the com port from	which the get command	d was received	
Alespon	A response is sent to all com ports if the audio status was changed on any input			
NOTES				
K-Config	Example			
"#AUD-SIGNAL? 1",0x0D				

MUTE

Functions		Permission	Transparency	
Set:	MUTE	End User	Public	
Get:	MUTE?	End User	Public	
Descriptio	n	Syntax		
Set:	Set audio mute	#MUTE SPchannel,mute_m	odeCR	
Get:	Get audio mute	#MUTE? SPchannelCR		
Response				
~nn@ MUTI	~nn@MUTESPchannel, mute_modeCR LF			
Parameter	Parameters			
channel	channel – audio output number: 1 (Audio Out)			
mute_mod	<i>mute_mode</i> - 0 (Off), 1 (On)			
Response	Triggers			
Notes	Notes			
K-Config E	K-Config Example			
Mute the A	Audio Out output:			
"#MUTE 1	"#MUTE 1,1",0x0D			

DIP-31 – Protocol 3000

Communication Commands

Command	Description
ETH-PORT	Set/get Ethernet port protocol
NET-DHCP	Set/get DHCP mode
NET-GATE	Set/get gateway IP
NET-IP	Set/get IP address
NET-MAC	Get MAC address
NET-MASK	Set/get subnet mask

ETH-PORT

Functior	าร	Permission	Transparency	
Set:	ETH-PORT	Administrator	Public	
Get:	ETH-PORT?	End User	Public	
Descript	ion	Syntax		
Set:	Set Ethernet port protocol	#ETH-PORT SPportType,	ETHPortCR	
Get:	Get Ethernet port protocol	#ETH-PORT?SPportType	CR	
Respons	se			
~nn@ ET	H-PORTSPportType,ETHPortCR LF			
Parame	Parameters			
portType – string of 3 letters indicating the port type: TCP, UDP ETHPort – TCP / UDP port number: 0-65565				
Response Triggers				
Notes				
If the port number you enter is already in use, an error is returned The port number must be within the following range: 0-(2^16-1)				
K-Config Example				
Set the Ethernet port protocol for TCP to port 12457: "#ETH-PORT TCP, 12457", 0x0D				

NET-DHCP

Functions		Permission	Transparency
Set:	NET-DHCP	Administrator	Public
Get:	NET-DHCP?	End User	Public
Description		Syntax	
Set:	Set DHCP mode	# NET-DHCP SP <i>mode</i> CR	
Get:	Get DHCP mode	#NET-DHCP?CR	

Response

~nn@**NET-DHCP**SP*mode*CR LF

Parameters

mode - 0 (do not use DHCP. Use the IP address set by the factory or the NET-IP command), 1 (try to use DHCP. If unavailable, use the IP address set by the factory or the NET-IP command)

Response Triggers

Notes

Connecting Ethernet to devices with DHCP may take more time in some networks

To connect with a randomly assigned IP by DHCP, specify the device DNS name (if available) using the NAME command. You can also get an assigned IP by direct connection to USB or RS-232 protocol port if available

Consult your network administrator for correct settings

K-Config Example

Enable DHCP mode, if available:

"#NET-DHCP 1",0x0D

NET-GATE

Functions		Permission	Transparency	
Set:	NET-GATE	Administrator	Public	
Get:	NET-GATE?	End User	Public	
Description		Syntax		
Set:	Set gateway IP	#NET-GATE SP <i>ip_address</i> Cl	R	
Get:	Get gateway IP	#NET-GATE? CR		
Response	Response			
~nn@NET-GATESPip_addressCR LF				
Parameters				
<i>ip_address</i> – gateway IP address, in the following format: xxx.xxx.xxx				
Response Triggers				
Notes				
A network gateway connects the device via another network, possibly over the Internet. Be careful of security problems. Consult your network administrator for correct settings.				
K-Config Example				

Set the gateway IP address to 192.168.0.1: "#NET-GATE 192.168.000.001", 0x0D

NET-IP

Functions		Permission	Transparency	
Set:	NET-IP	Administrator	Public	
Get:	NET-IP?	End User	Public	
Description		Syntax		
Set:	Set IP address	#NET-IP SPip_addressCR		
Get:	Get IP address	#NET-IP?CR		
Response				
~nn@ NET-]	~nn@ net-ip SP <i>ip_address</i> CR_LF			
Parameters	Parameters			
<i>ip_address</i> – IP address, in the following format: xxx.xxx.xxx				
Response T	riggers			
Notes	Notes			
Consult your network administrator for correct settings				
K-Config Example				
Set the IP address to 192.168.1.39: "#NET-IP 192.168.001.039", 0x0D				

NET-MAC

Functions		Permission	Transparency	
Set:	-	-	-	
Get:	NET-MAC?	End User	Public	
Description		Syntax		
Set:	-	-		
Get:	Get MAC address	#NET-MAC?CR		
Response				
~nn@NET-1	~nn@NET-MACSPmac_addressCR_LF			
Parameters				
mac_address – unique MAC address. Format: xx-xx-xx-xx-xx where x is hex digit				
Response 1	Triggers			
Notes				
K-Config Ex	K-Config Example			
"#NET-MAG	"#NET-MAC?",0x0D			

NET-MASK

Functions		Permission	Transparency
Set:	NET-MASK	Administrator	Public
Get:	NET-MASK?	End User	Public
Description		Syntax	
Set:	Set subnet mask	# NET-MASK SPnet_maskCF	2
Get:	Get subnet mask	#NET-MASK?CR	
Response	Response		
~nn@ NET-	~nn@ NET-MASK SP <i>net_mask</i> CR_LF		
Parameters	Parameters		
net_mask - format: xxx.xxx.xxx			
Response Triggers			
The subnet	mask limits the Ethernet connection	within the local network	
Consult you	ur network administrator for correct s	ettings	
Notes	Notes		
K-Config Example			
Set the sub	net mask to 255.255.0.0:		
"#NET-MAS	"#NET-MASK 255.255.000.000",0x0D		

EDID Handling Commands

Additional EDID data functions can be performed via the **DIP-31** web pages or a compatible EDID management application, such as Kramer EDID Designer (see www.kramerav.com/product/DIP-31).

Command	Description
CPEDID	Copy EDID data from the output to the input EEPROM
LOCK-EDID	Lock last read EDID

CPEDID

Functions		Permission	Transparency		
Set:	CPEDID	End User	Public		
Get:	-	-	-		
Description		Syntax			
Set:	Copy EDID data from the output to the input EEPROM	<pre>#CPEDIDSPsrc_type,src_id,dst_type, dest_bitmapCR</pre>			
Get:	-	-			
Response					
~nn@CPEDIDSPsrc_type,src_id,dst_type,dest_bitmapCR_LF					
Parameters					
<pre>src_type - EDID source type (usually output): 0 (input), 1 (output), 2 (default EDID) src_id - for input source: 1 (HDMI In 1), 2 (HDMI In 2), 3 (PC In), for output source: 1 (HDMI Out), for default EDID source: 0 (default EDID) dst_type - EDID destination type (usually input): 0 (input), 1 (output), 2 (default EDID) dest_bitmap - bitmap representing destination IDs. Format: XXXXX, where X is hex digit. The binary form of every hex digit represents corresponding destinations. Setting '1' indicates that EDID data is copied to this destination. Setting '0' indicates that EDID data is not copied to this destination. Response Triggers Response is sent to the com port from which the Set was received (before execution) Notes</pre>					
Destination bitmap size depends on device properties (for 64 inputs it is a 64-bit word) Example: bitmap 0x0013 means inputs 1, 2 and 5 are loaded with the new EDID. In this device, if the destination type is input (0), the bitmap size is 3 bits, for example bitmap 0x5 means inputs 1 and 3 are loaded with the new EDID.					
K-Config Example					
Copy the EDID data from the HDMI Out output (EDID source) to the HDMI In 1 input:					
Copy the EDID data from the default EDID source to HDMI In 1 and PC In inputs: "#CPEDID 2,0,0,0x5",0x0D					

LOCK-EDID

Functions		Permission	Transparency		
Set:	LOCK-EDID	End User	End User		
Get:	LOCK-EDID?	End User	End User		
Description		Syntax			
Set:	Lock last read EDID	#LOCK-EDID SPinput_id,lock_modeCR			
Get :	Get EDID lock state	#LOCK-EDID?SPinput_idCR			
Response					
~nn@LOCK-EDIDSPinput_id,lock_modeCR LF					
Parameters					
input_id - 1 (HDMI In 1), 2 (HDMI In 2), 3 (PC In),					
lock_mode - 0 (Off: unlocks EDID), 1 (On: locks EDID)					
Response Triggers					
Notes					
K-Config Example					
Lock the last read EDID from the HDMI In 2 input: "#LOCK-EDID 2,1",0x0D					

DIP-31 - Protocol 3000













Rev:



SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. All brand names, product names, and trademarks are the property of their respective owners.

www.KramerAV.com info@KramerAV.com